
INSTALLATION INSTRUCTIONS

LT-NMO-BNC-18FT - NMO Mobile Antenna



Using a 3/4" hole saw, make a hole in the vehicle roof where the center of the antenna will be installed.

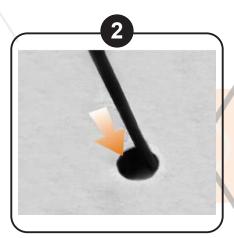


Insert the connector and cable into the hole.



Insert the rear side of the NMO mount inside the 3/4 inch hole.



Make the NMO Mount flat in the vehicle surface.

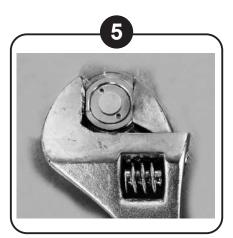

After the Locking nut is tighten by finger, use a wrench and tighten NMO Locking nut more turn.



Done and make sure the gasket is seated to the vehicle surface

WARNING:

DO NOT apply grease, glue or sealant to the antenna pin contact surface.

